

Amigo


SHOCK ABSORBER ASSEMBLY AMIGO R

Shock absorber set consisting of:

- 2 x shock absorber supports (1 x left and 1 x right)
- 2 x shock absorbers S26x100
- 2 x hexagonal tap bolts M12x65
- 2 x hexagonal bolts M12x80
- 4 x self-locking nuts M12
- 4 x washers M12
- 2 x hexagonal bolts M10x100
- 2 x flanged nuts with tothing M10
- 2 x washers M10



Slide the shock absorber support over the axle with the overhang facing to the front of the trailer and the kink facing outwards.

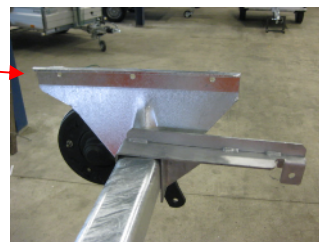

Slide the washer M10 over the hexagonal bolt M10x100 and then insert the bolt through the shock absorber support from the front to the back underneath the axle. Screw the flanged nut with tothing M10 onto the hexagonal bolt M10x100



Place the shock absorber S26x100 between the lips of the shock absorber support. Slide the washer M12 over the hexagonal bolt M12x80 and then insert the bolt through the shock absorber from the outer side to the inner side. Screw the self-locking nut M12 onto the hexagonal bolt M12x80.



Position the shock absorber S26x100 against the shock absorber support on the axle. Slide washer M12 over the hexagonal tap bolt 12x65 and insert through the shock absorber from the outer side to the inner side. Screw the self-locking nut M12 onto the hexagonal tap bolt 12x65.



Amigo

SHOCK ABSORBER ASSEMBLY AMIGO R

Tighten all nuts and bolts.



Net weight shock absorber: 5 kg